
 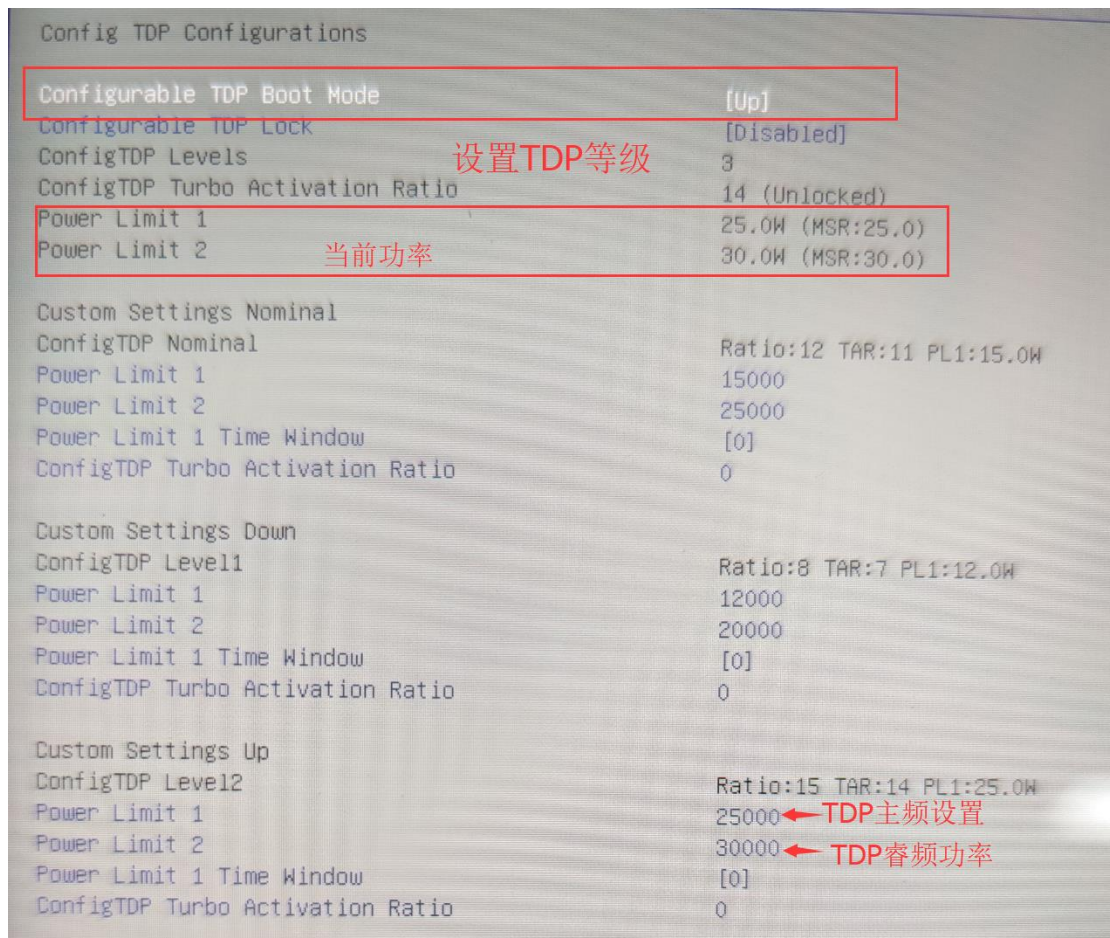



## TDP 功率设置

Advance → Power & Performance → CPU-Power Manement Control

→ Config TDP Configurations

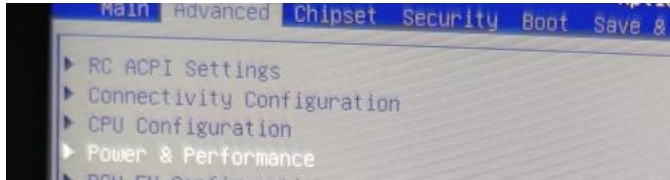

## 关闭温度管理

Advance → Intel(R) Dynamic Tuning Configuration → Intel(R) Dynamic Tuning

